 


English version

Q. How Can I Set Up GC553 with OBS Studio

Install OBS Studio: <https://obsproject.com/>

(1) Start OBS Studio→Source”+” Video Capture Device

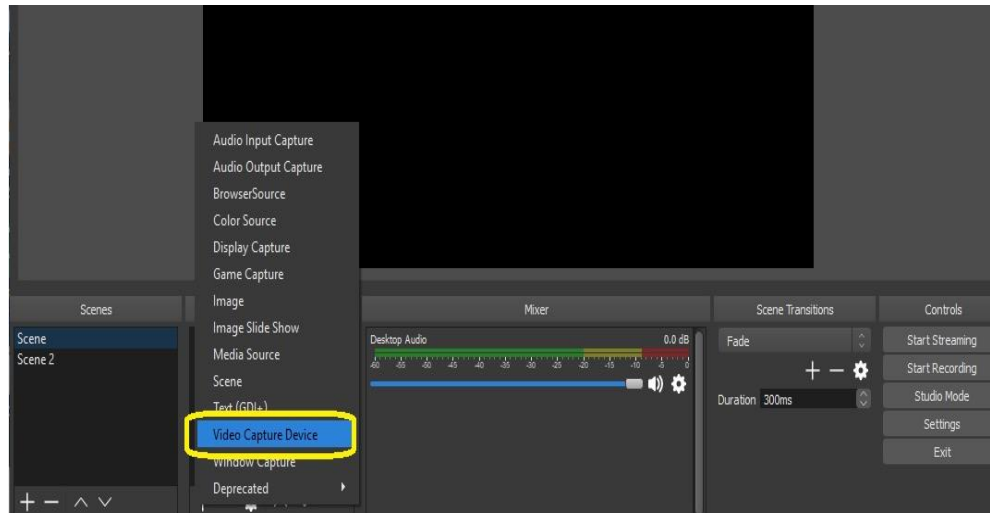

2.Device→Live Gamer Ultra – Video

When the video source is 1920 x 1080, please set the resolution and FPS exactly according to the source, the FPS will usually be 60, 59.94, 30 and 29.97


☆ Reference Note: The FPS of common devices is as follows

PlayStation 4 &5: 59.94


XBOX Series X | S: 59.94 iPhone 11 Pro Max: 59.94

iPad 11 Pro (3rd generation): 59.94

 
ROG Phone 5: 59.94

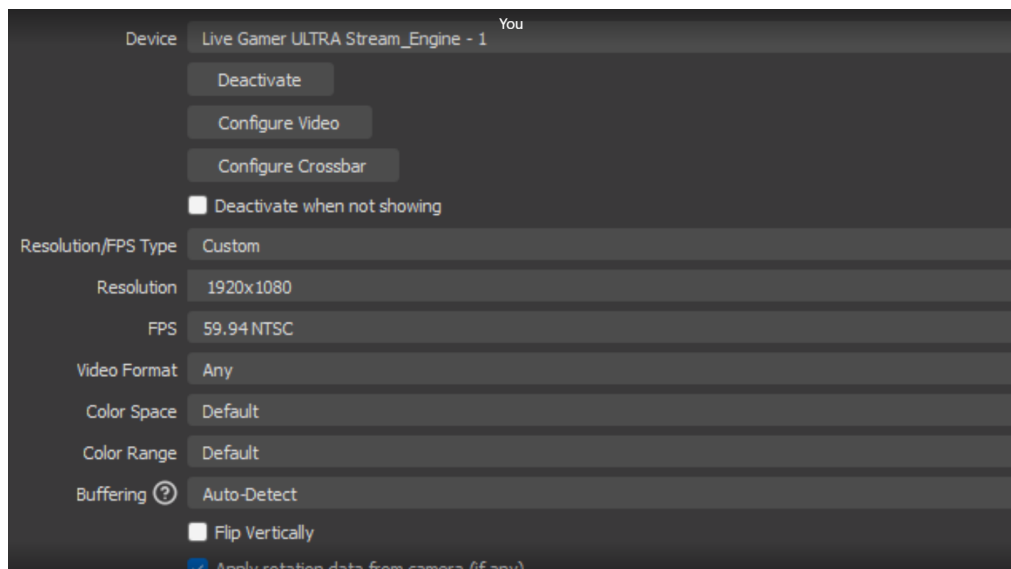


Nintendo Switch: 60

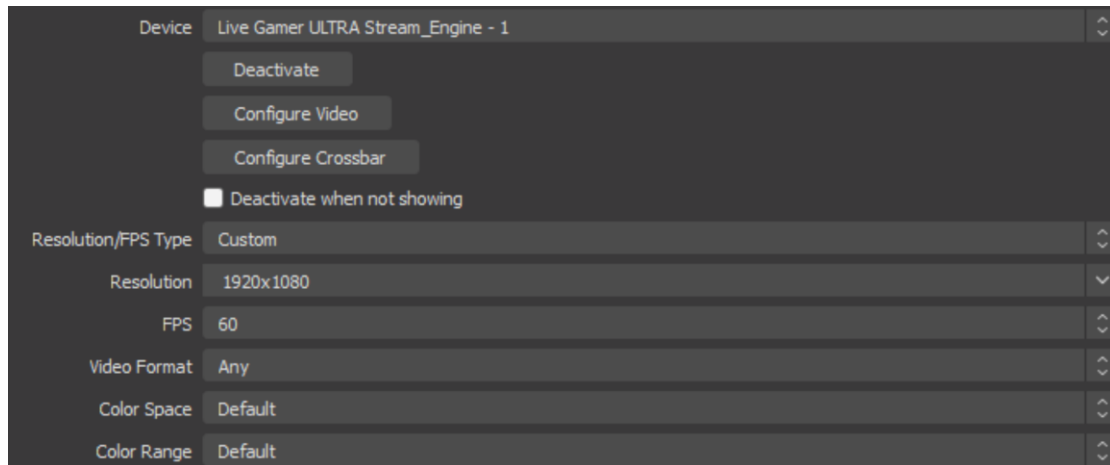 

 
(3) Source”+” Audio Input Capture

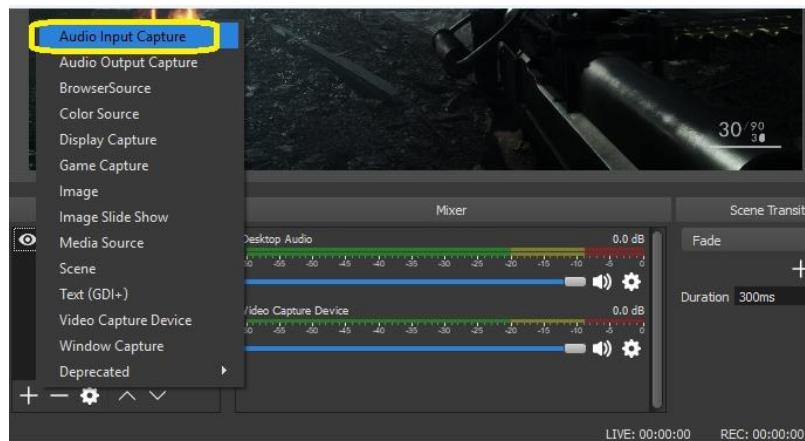

 (4)Device→HDMI (Live Gamer Ultra-Audio)→OK

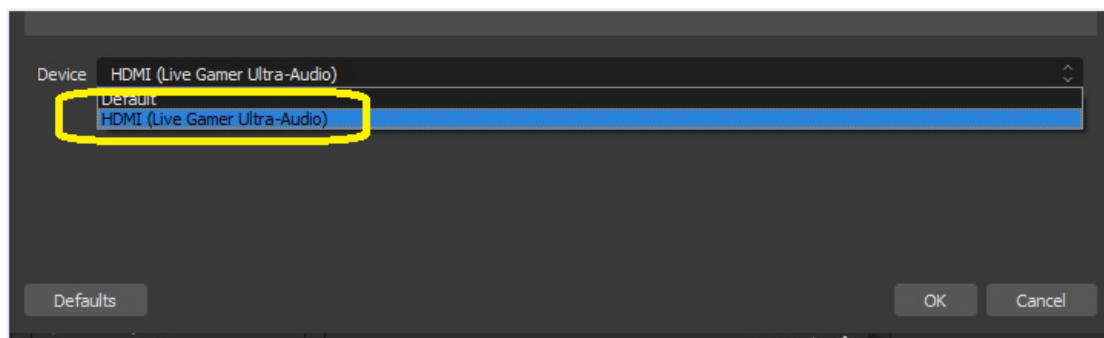

 (5)Advanced Audio Properties

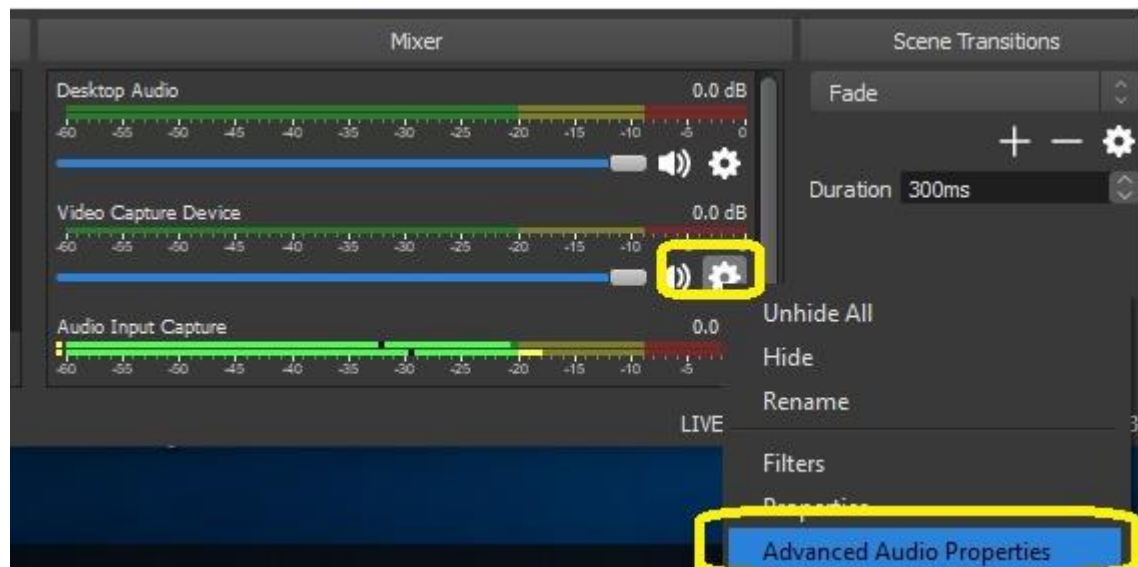


(6)Audio Monitoring→Monitor and Output



(7)How to solve image and sound out of sync problem when you playback the recorded video, or streaming in OBS or Streamlabs OBS


Please adjust OBS settings:

 1. Open OBS and right-click the "Mixer" gear icon.
2. Under "Advanced Audio Properties" >> "Video Capture Device" >> "Sync Offset" option, add value "-50 ~ -200" (ms)

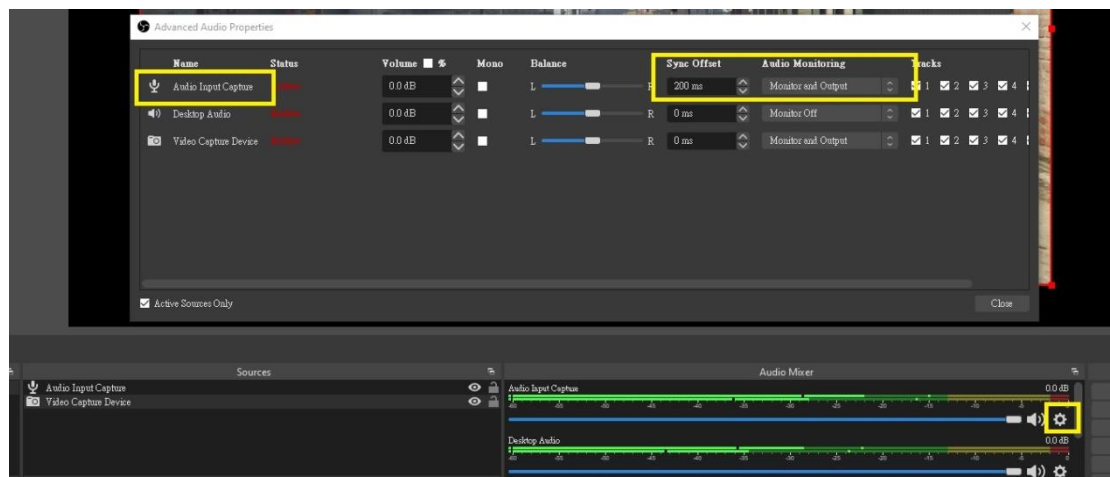


(8) In case the image and sound out of sync problem in OBS or Streamlabs OBS in **preview**, you can try using different USB 3 ports, or try following the below setting:

 Tick Use **Custom audio device**, and add **HDMI(Live Gamer Ultra-Audio)** in Audio Device.

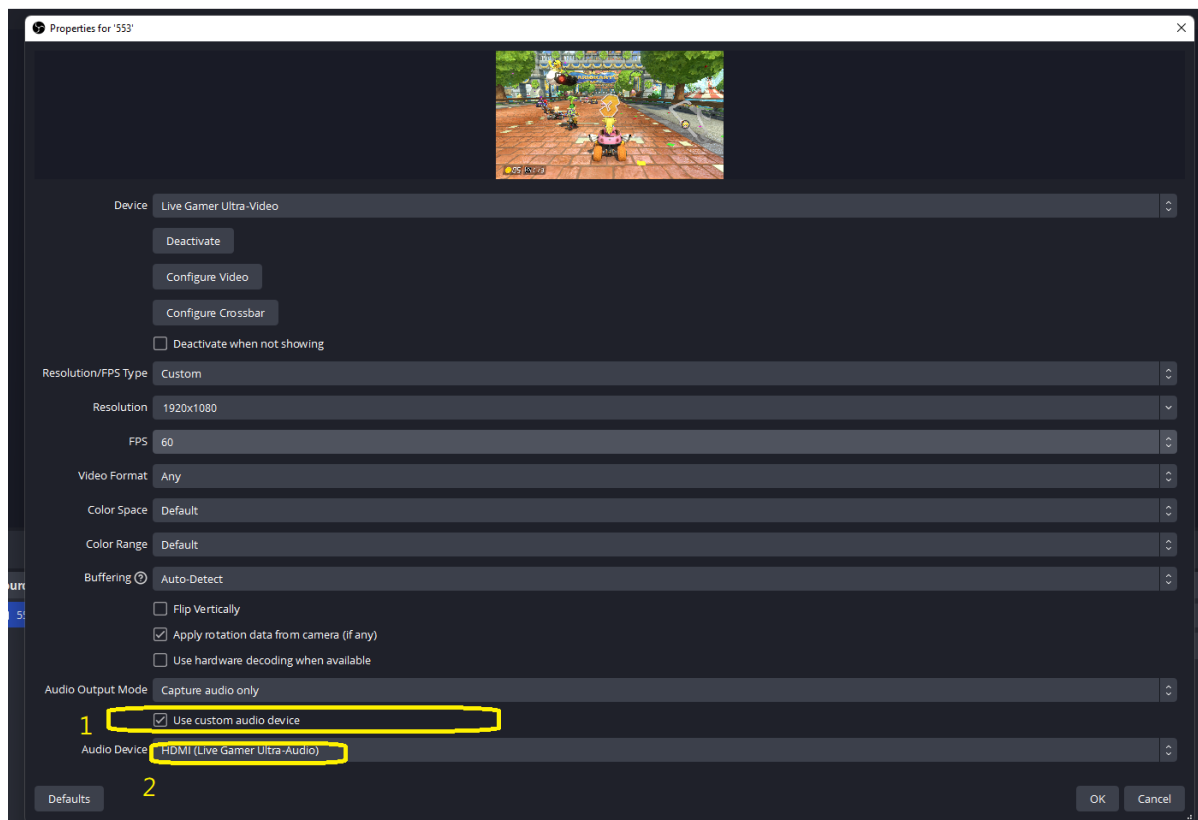

 Next, select **Monitor and Output** in Audio Monitoring in Video Capture device settings:

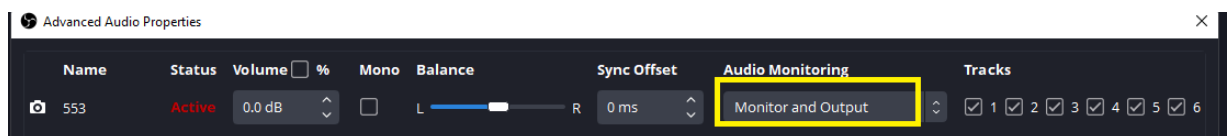


Notes: No need to add Audio Input device in Source column in OBS Studio.

中文版

Q.GC553 搭配 OBS 使用設定方式如下

A=請參照下方設定步驟

 (1)開啟 OBS Studio→Source”+” Video Capture Device

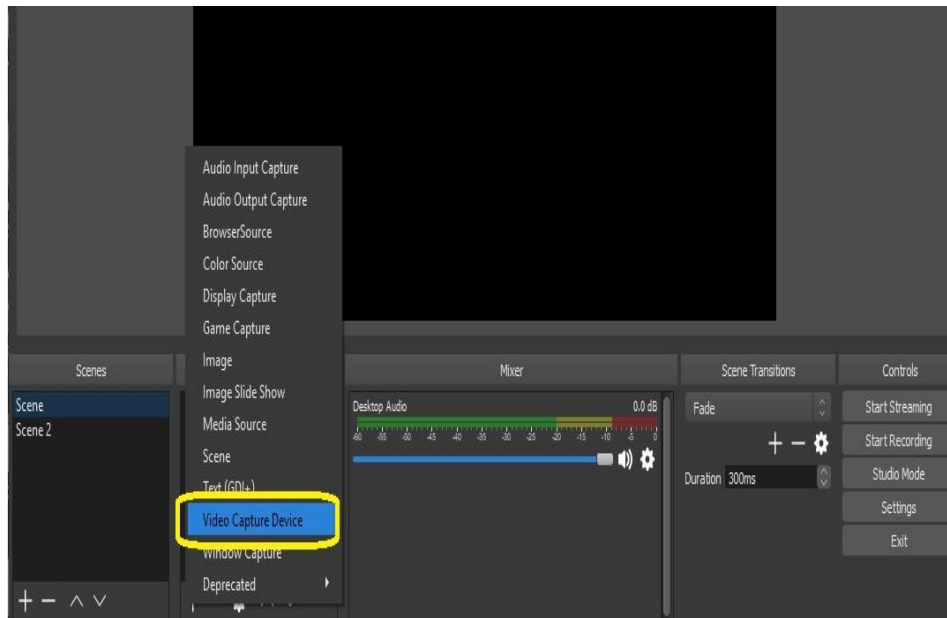

2.Device→Live Gamer Ultra - Video

Resolution/FPS Type→Custom

Resolution→ 請設定與訊號源相同

FPS→請設定與訊號源相同

當影像來源為 1920 x 1080 時，請完全按照來源設定解析度和 FPS，FPS 通常會有 60、59.94、30 及 29.97

☆ 附註: 常見的 FPS 如下：


PlayStation 5: 59.94

PlayStation 4: 59.94


XBOX Series X | S: 59.94 iPhone 11 Pro Max: 59.94

iPad 11 Pro (3rd generation): 59.94

 
ROG Phone 5: 59.94

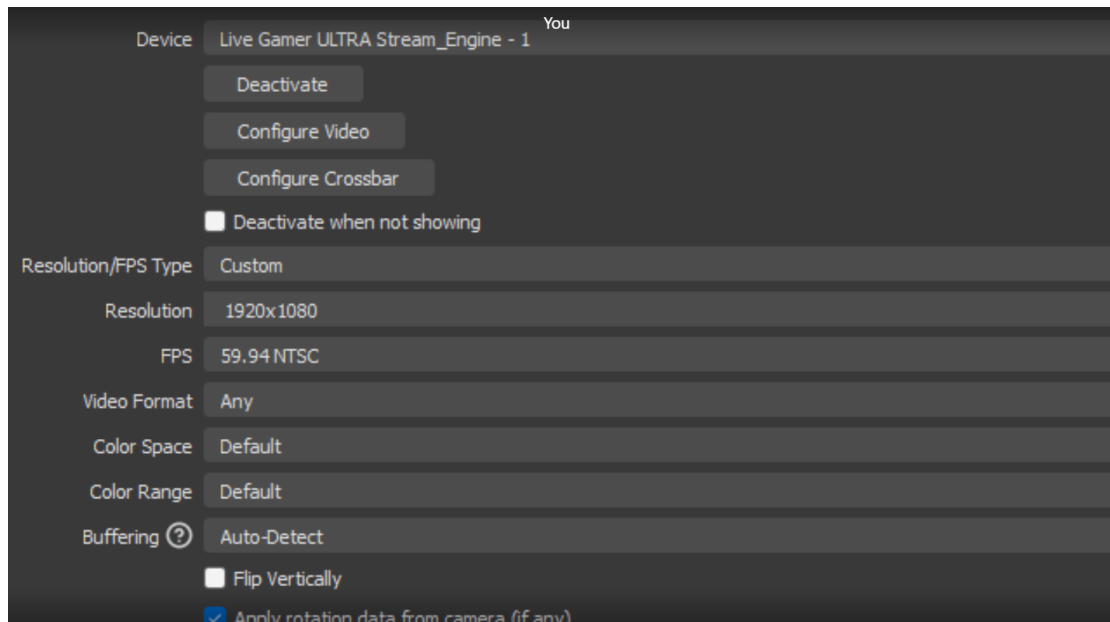


Nintendo Switch: 60

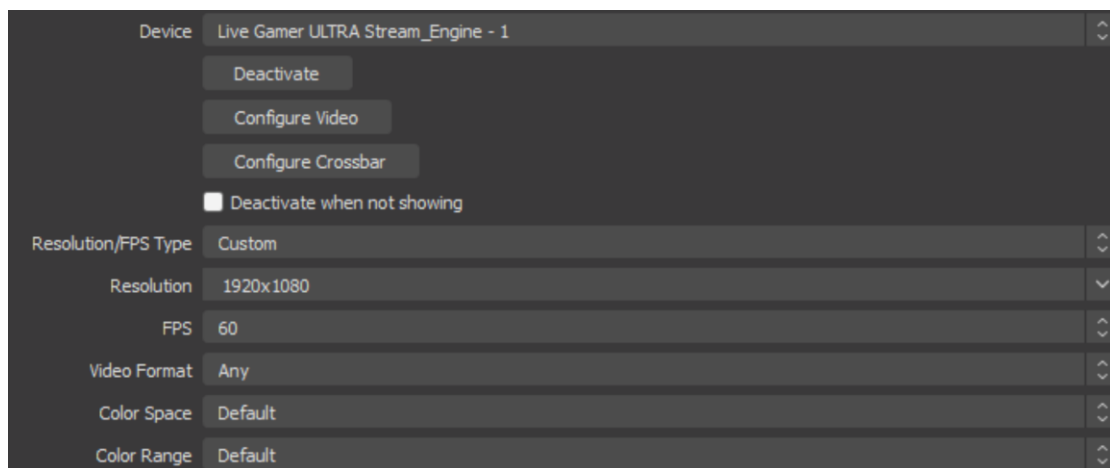 

 
(3) Source”+” Audio Input Capture

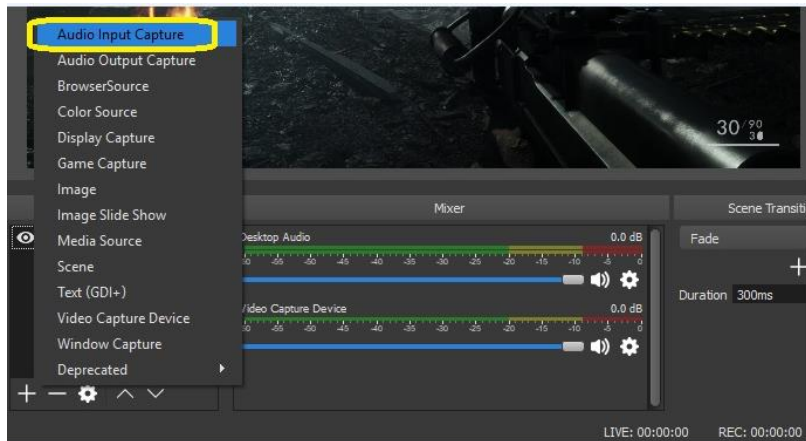

 (4) Device → HDMI (Live Gamer Ultra) → OK

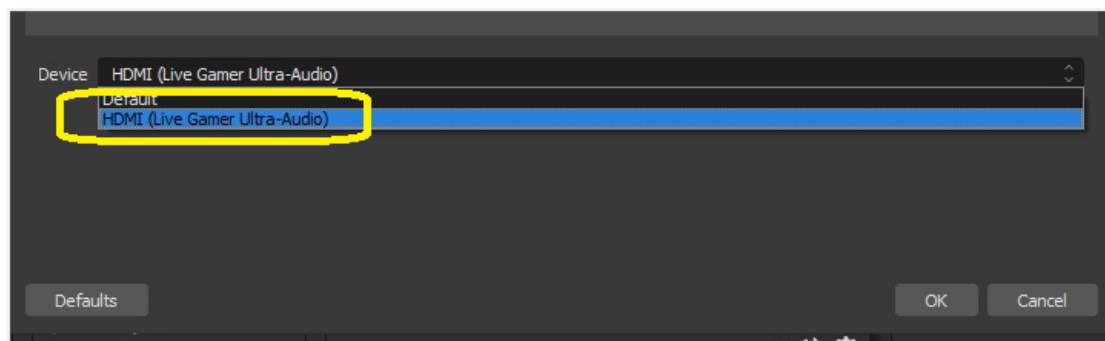

 (5) Advanced Audio Properties

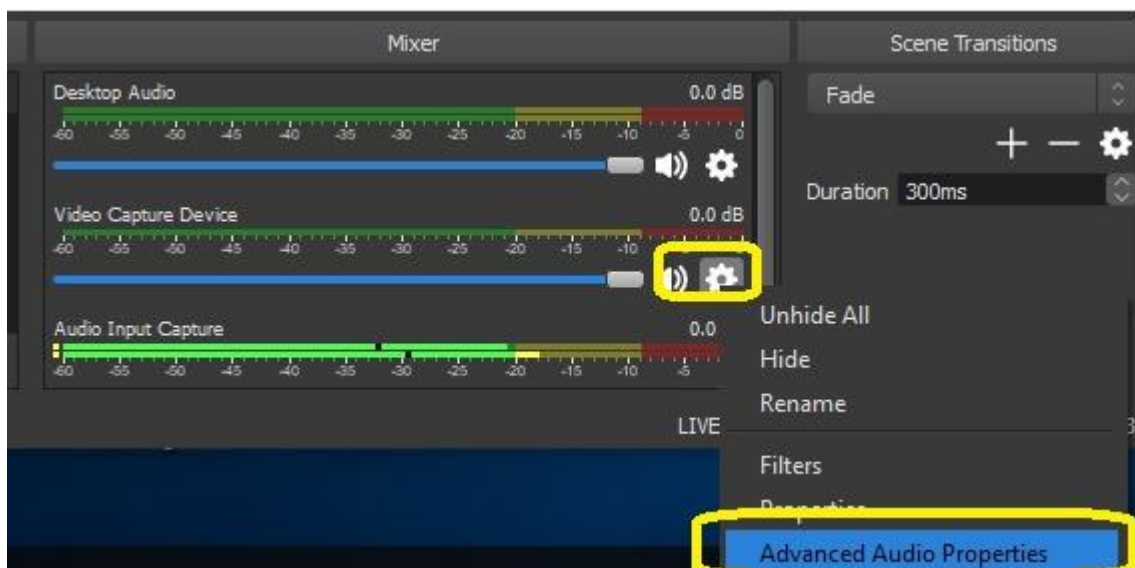


(6) Audio Monitoring → Monitor and Output



(7)如何解決 錄下來的影片，或直播過程中 OBS 或 Streamlabs OBS 中的圖像和聲音不同步問題


請調整 OBS 設置：

 - 1、打開 OBS，右擊“Mixer”齒輪圖標。
- 2.在“高級音頻屬性”>>“視頻捕獲設備”>>“同步偏移”選項下，添加值“-50 ~ -200”（毫秒）

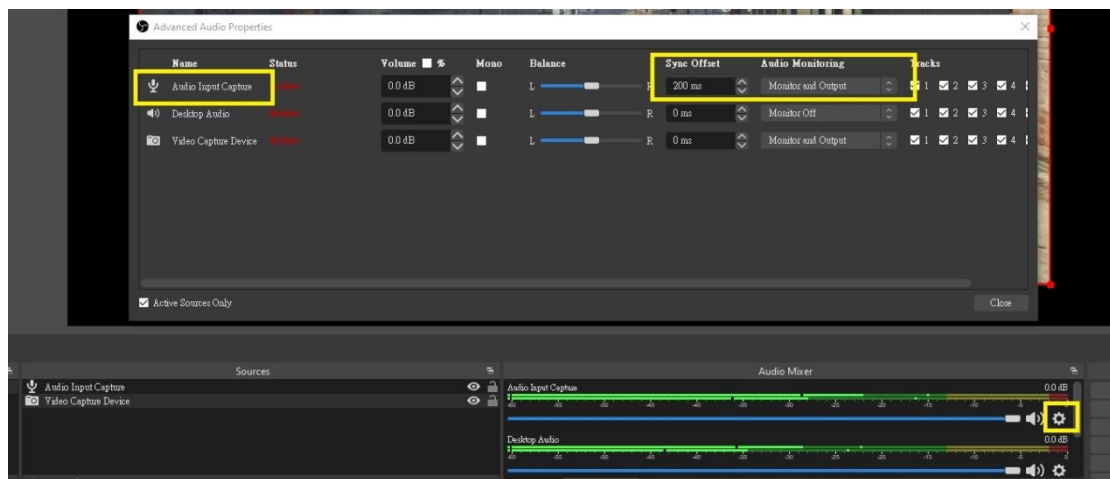


(8) 如果 OBS 或 Streamlabs OBS 在預覽中出現圖像和聲音不同步的問題，您可以嘗試使用不同的 USB 3 端口，或嘗試按照以下設置：

 勾選使用自定義音頻設備，並在原本視訊擷取設備中添加 HDMI(Live Gamer Ultra-Audio)。

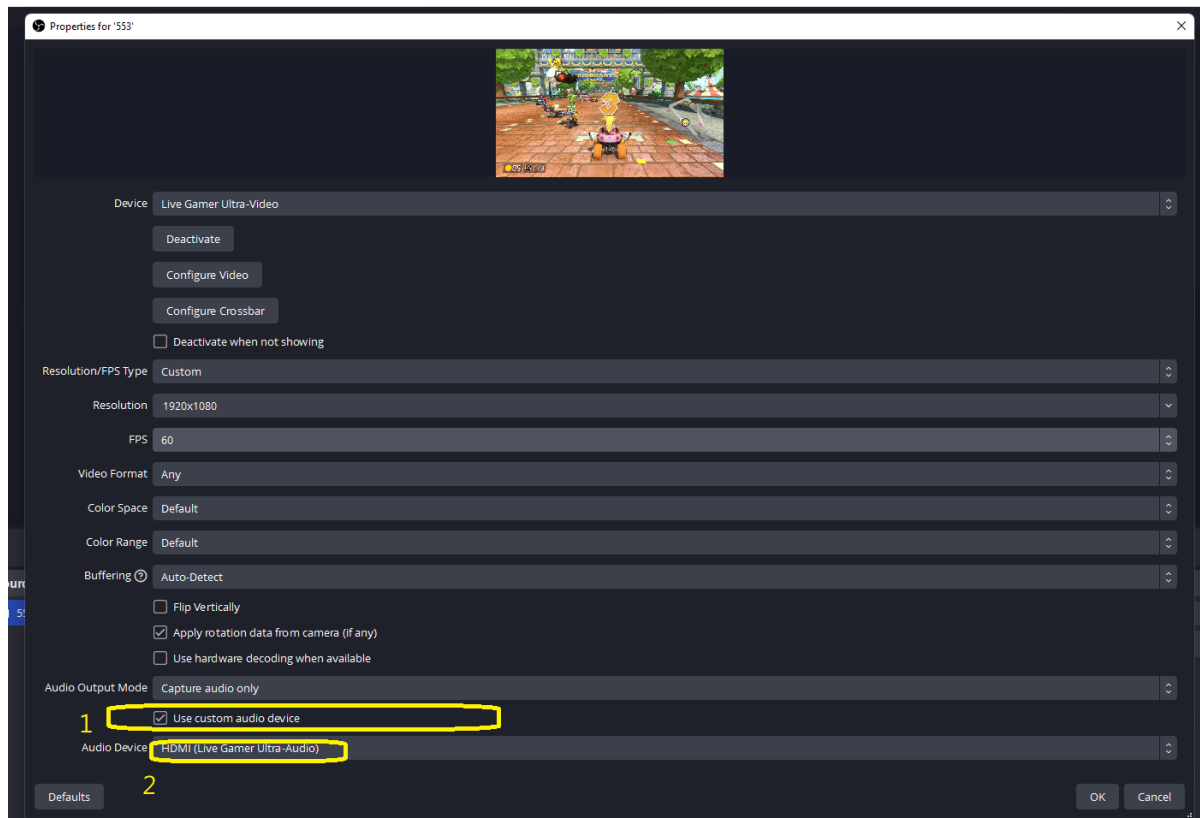

 接下來，在 Video Capture 設備設置中的 Audio Monitoring 中選擇 Monitor and Output：

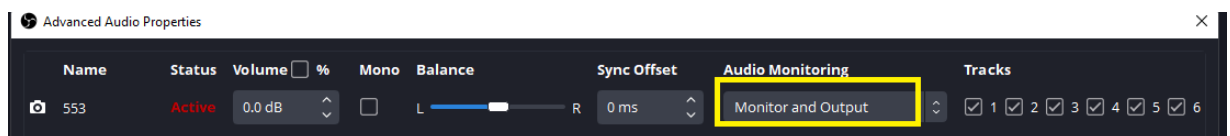

注意：OBS Studio 的 Source 欄中無需添加 Audio Input 設備。