Model name: GC553 & GC551G2

Question:

如何在 Xbox Series X and PlayStation[®]5 啟用 VRR?

Xbox 系列 X:

1. 在 Xbox Series X 上打開 VRR, 請轉到"一般" > "電視和顯示選項"

段 🥚	General
Recommendations	^{(የ} ባ <mark>ት</mark> Network settings
General	
Account	「 早 TV & display options
System	
Devices & connections	(1) Values & sudia suterit
Preferences	マック volume & audio output
Accessibility	

然後是視訊輸出模式。

Advanced
Video modes
Video fidelity & overscan
Help

2. 確保選允許可變刷新率。



注意:

如果您想在 XBox 上使用 GC553/GC551G2 捕捉或記錄高於 60 的幀率,您需要 取消勾選允許 4K 和允許 HDR10。



PlayStation[®]5

1.前往 PS5 主頁
 2.選擇設定,然後選擇屏幕和視頻

ames	Media	a Q Settings
Settings		
	140	users and Accounts
	80 + + 1	Family and Parental Controls
	٢	System
	•	Storage
	∢◄	Sound
		Screen and Video

3. 選擇 Video Output.,然後選擇 VRR 並將其設置為 Automatic。

Screen and Video		
	VRR	✓ Off
	Allow the refresh rate to adjust in real time while using TVs and games the refresh rate). Results will vary depending on the TV you're using.	Automatic

4. 現在將在 PS5 上為支持的遊戲啟用 VRR。

reen and Video			
Video Output	Video Output Information		
	Resolution		
	4K Video Transfer Rate		
	Learn More		
	Automatic Allow the refresh rate to adjust in real time while using TVs and games that support VRR (variable refresh rate). Results will vary depending on the TV you're using.		
	Apply to Unsupported Games	0)	
	HDR	Aiways On	
	Adjust HDR		